



**MPX-50 U**  
**4K Media Player**

**User Manual**



## Contents

What's in the box.....	3
MPX-50 U .....	3
Product Description .....	3
Features .....	3
Specifications .....	3
Front Panel.....	5
Remote Control.....	9

## What's in the box

### MPX-50 U

- 1 MPX-50 U Media Player
- 1 remote control
- 1 power adapter

## Product Description

The MPX-50 U is a 4K30 media player that supports multiple formats of video/audio and picture playback. It is compact and size and designed for ease of use.

## Features

 
- HDMI 1.4
- H.264 decoding
- Auto playback resume
- Playback time setting
- USB and SD card and external HDD media support

## Specifications

- **Video formats**
  - RM
  - RMVB
  - MPEG
  - VOB
  - DAT
  - Divx
  - Xvid
  - Mkv
  - MP4
  - AVI
  - MOV
  - MPG
  - TS
  - TP
  - M2TS
  - WMV
  - FLV
- **Audio formats**
  - AC3

- DTS
- MP3
- WMA
- WAV
- OGG
- AAC
- APE
- FLAC
- **Picture formats**
  - JPEG
  - JPG
  - BMP
  - PNG
  - GIF
  - TIFF

## Rear Panel

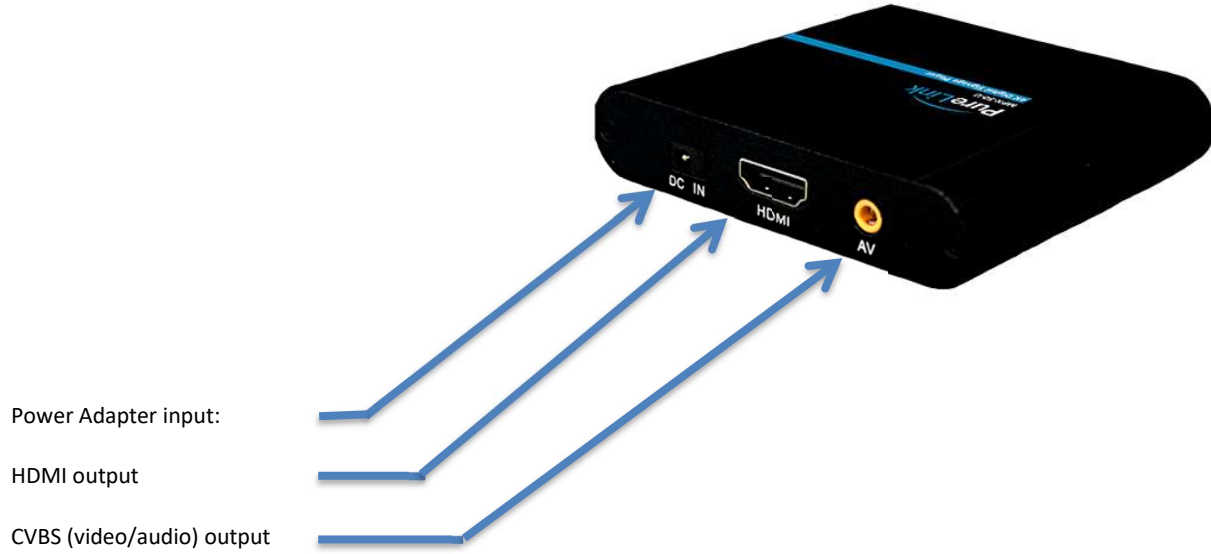

## Front Panel



## OSD

 
### File Manager

Make sure your media is inserted first.

It is suggested that you plug your USB storage device before turning on your TV so that you can see the function icons such as "Movie", "Music" and "Photo".


Switch the video source of your TV. Your TV comes with multiple video sources such as TV, AV, YUV and HDMI. Please switch to the correct source. For instance, if you connect the media player to TV through AV Cable please switch the video source of the TV to "AV". You may do that with the buttons on your remote control or buttons on the television.

On the main menu screen, you will see "File Manager" "Music" "Movie" "Photo" and "Setting" icons. These icons display the categories available on the USB device/Smart Card you inserted for instance, if you click "Movie" icon to enter, you will access to the video files in your USB / SD storage devices.

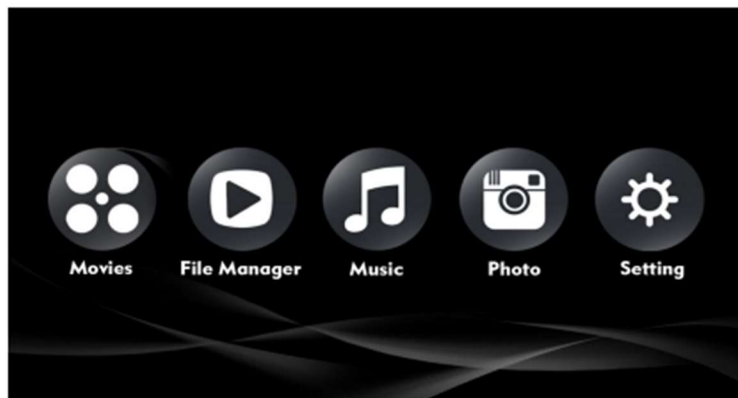

### Setting

 Use the arrow keys on the remote to select “Setting” and you will see a list of items once you have entered the “Setting” page. The options include “Sound”, “Display”, “Language”, “Backup&reset”, “Date&time” and “About device”.

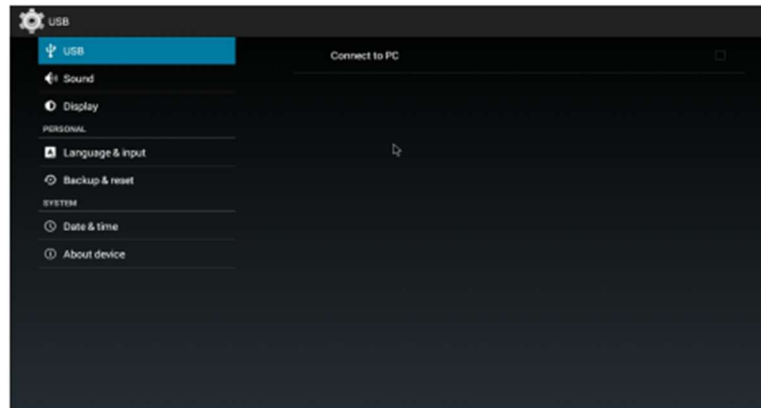

### File Manager, Music, Video, Photo

You should have your USB device or SD/MMC connected to the media player first in order to access the files, music, video, photo, and follow the tip to use it.



### Video Repeat, Loop Function

When the video is playing, press Menu key that will show you as the picture. Choose the first one to select "Single", "Repeat all", "Repeat one" and "Random".

1. "Single": video just play one time.
2. "Repeat one": play the current video repeatedly
3. "Repeat all": play all videos orderly and repeatedly
4. "Random": play all videos in random mode





## Remote Control



	switch on/off the player
	Set the media player as mute
	No Funtion
	No Funtion
	To select an audio track on a media file
	go to system set up
	in the video/picture/muisc file playback, use to switch previous file
	in the video/picture/muisc file playback, use to switch next file
	to decrease the volume
	to increase the volume
	fast key to mouse mode
	call out the options menu for your current screen of running application
	press to navigate left/right/up/down,press ok to confirmin your choice
	return to the Home Screen(choose of Launcher required)
	return
	delete
	enter

If you have further questions, please contact your PureLink dealer, or visit [www.purelinkav.com](http://www.purelinkav.com)

